





## PBE CLAMP

## Mounting AL-02 series on Round Cylinder

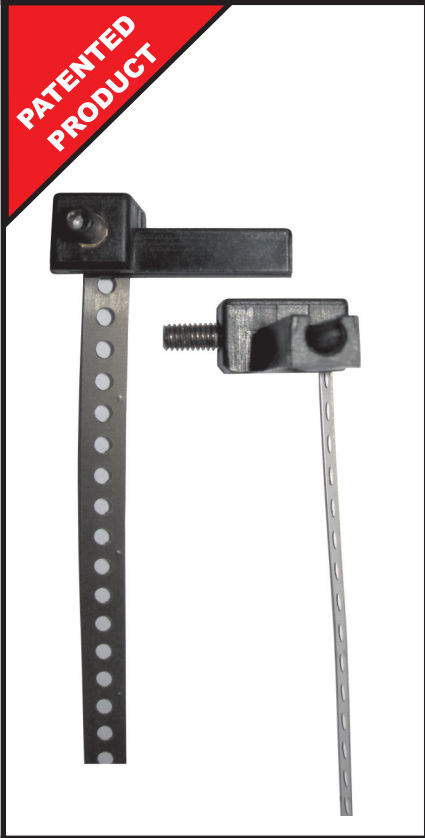

**PATENTED  
PRODUCT**

PBE	Step 1	Step 2
	<p><b>PBE-01</b> For 8φ ~ 50φ Round Cylinder Use</p> <p><b>PBE-02</b> For 8φ ~ 125φ Round Cylinder Use</p>	<p>Start by loosening screw and retain 3 to 4 screw threads in the housing.</p>

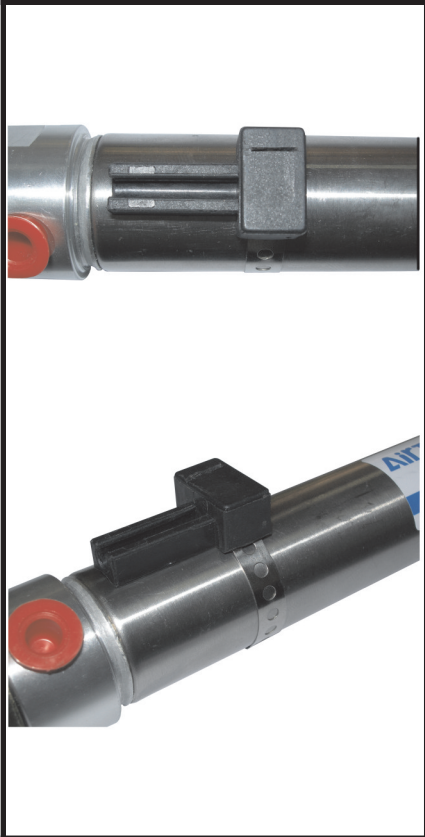

Step 3	Step 4	Step 5
<p>1. Pull up the band and push the housing down to tighten the band.</p> <p>2. Tighten screw lightly (by hand) in until the screw locates in the nearest hole of the band.</p>	<p>1. Cut the band flush with exposed top on the housing. (Cut the line as near top as possible.)</p>	<p>1. Use Allen key to tighten screw. Note! The exposed band will be drawn into the housing.</p> <p>2. Place sensor into groove of PBE clamp.</p> <p><b>⚠ ATTENTION!</b> Do not over tighten ! Damage to the clamp and/or cylinder may occur.</p>